


How to Set the Shift


1. On the main menu, select shift and press Ok.

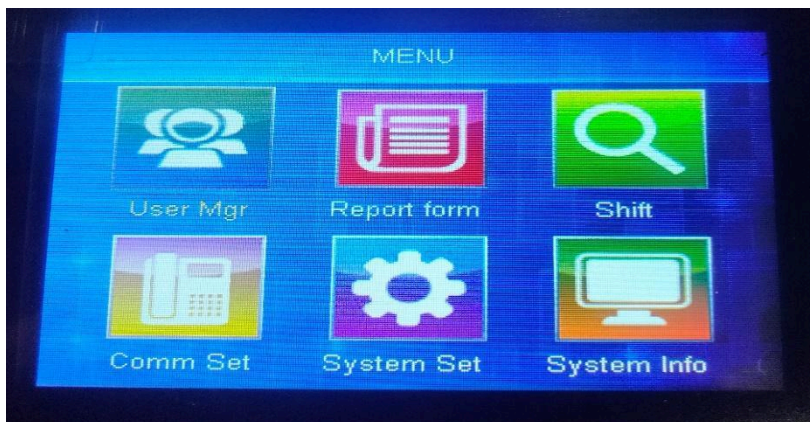

2. Select shift set and press [Ok]



3. Select shift 1, change the time in and out, enter the permitted time late and early, OT start and OT valid, and add the allowed 10 shifts.

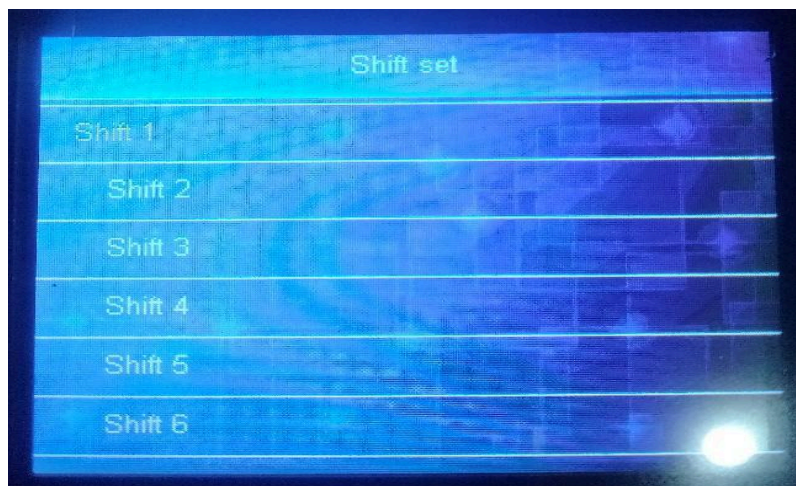

Shift 2

Hour	Minitue	Hour	Minitue
09	00	09	05
09	10	09	12
09	13	09	15

Bell: No

Allow Late: 010

Allow Early: 010

Rest: 2 Days

Enable OT: Close

OT Start: 60

OT Valid: 30